


Spool


INSTALLATION (STEP 1,2,3 AND 4)




1. Undo the blue twist tie holding the spool to the metal wire, remove the label and retie the twist tie in order to support the monofilament to the spool.

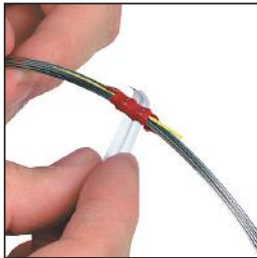

2. Undo the white twist ties.

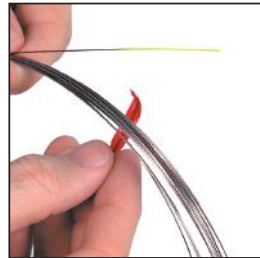

3. Remove the red twist tie indicating the beginning of the metal wire (**be careful with the unwinding wire leader**).

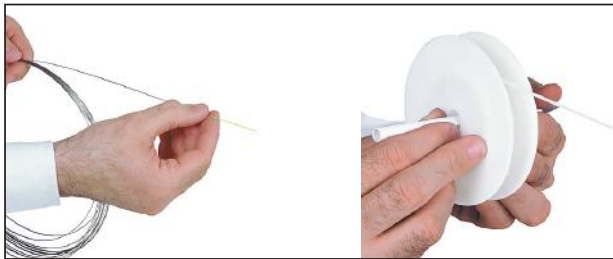

4. Insert the wire leader into the spirals, up to the opposite extremity. Remove the blue twist tie, insert a pencil in the hole of the spool and pull on the wire in order to only leave the monofilament in place. Cut the wire and tie the monofilament to the conveyor belt.

Plastic Spool Advantages:

- Protects the monofilament during shipment and storage
- Prevents multi-strand pintle pin monofilaments from tangling
- Compact and easy to use design

ATTENTION

In order to avoid injuries, handle the unwinding wire leader with care once the red twist tie has been removed.

Further, a movement too sharp in manual insertion may damage the tip of the pintle pin.



Pintle Wires, Seaming Spirals & other Conveyor Belt Accessories

We go the extra distance for you



Head office, Lippert International Inc.: 1658 Precision Park Lane San Diego, California U.S.A., 92173
Tel Sales Americas: (1)-819-340-0268 • **Tel Sales Europe:** (34)-91-797-0194 • **Fax:** (1)-888-741-0515
• info@lippertint.com Visit our web-site for more information about our products www.lippertint.com



Lippert International Inc. is the official distributor for Lippert Pintlepin Mfg. Inc. who is ISO 9001 certified.